


Guy Gray Manufacturing Co., Inc.

Blandville Road P. O. Box 2287 Paducah, Ky. 42001 Phone (502) 554-4423

NOTE:

FOR MODELS USING OVERHEAD
INLET PIPING SET PIPES
AT $48\frac{1}{4}$ " ABOVE FLOOR.

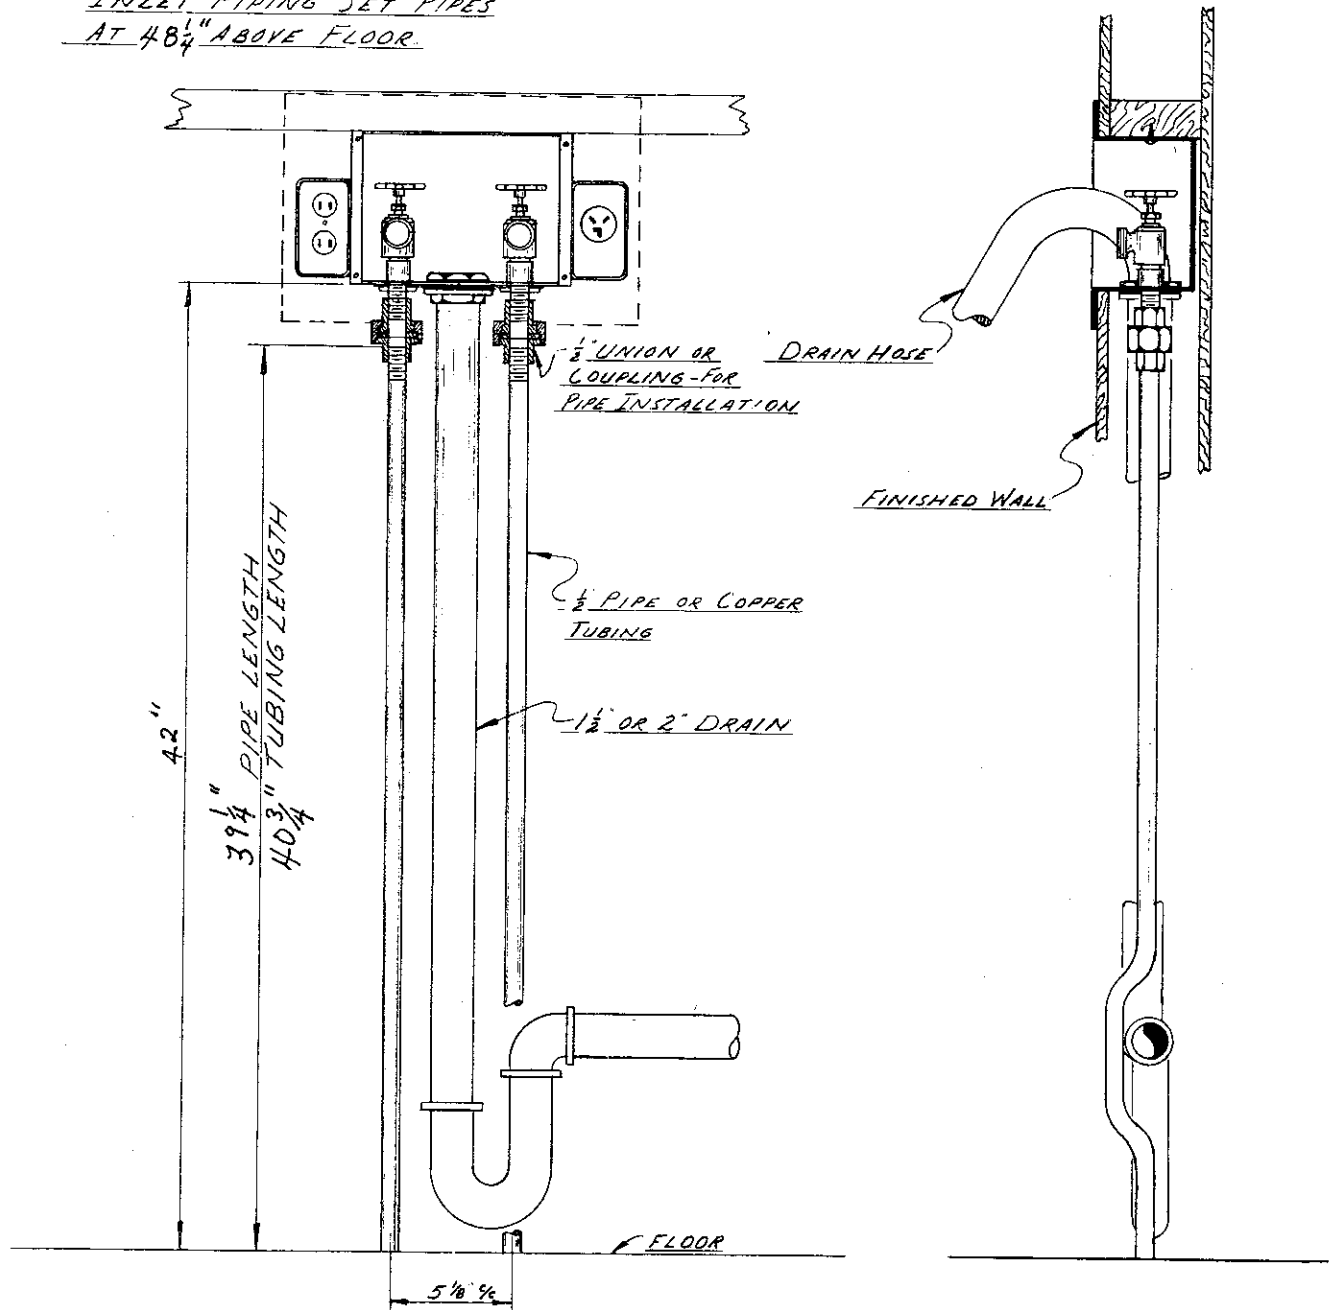

PLUMBING ROUGHING-IN MEASUREMENTS
FOR
SPACE SAVER WASHING MACHINE SUPPLY AND DRAIN

Model BED 150 & 200

INSTALLATION INSTRUCTIONS

1. Remove front plate from fixture.
2. Fasten fixture to stud or header with screws in holes provided.
3. Install half inch male end of connectors through half inch holes in bottom of fixture and secure with rubber washers - crow foot and half inch lock nuts.
4. Install half inch male faucets in female end of connector inside of fixture using pipe joint compound.
5. For copper installation sweat copper tube to bottom of connector.
6. For galvanized pipe installation use half inch coupling or unions.
7. To connect drain line use flanged locknut with rubber washer with slipnut installed inside fixture.
8. After wall is finished, replace front plate with screws provided with fixture.