


# Guy Gray Manufacturing Co., Inc.

Blandville Road P. O. Box 2287 Paducah, Ky. 42001 Phone (502) 554-4423

For Top Supply Models Set  
Tubing 50 $\frac{1}{4}$ " Above Finished Floor.

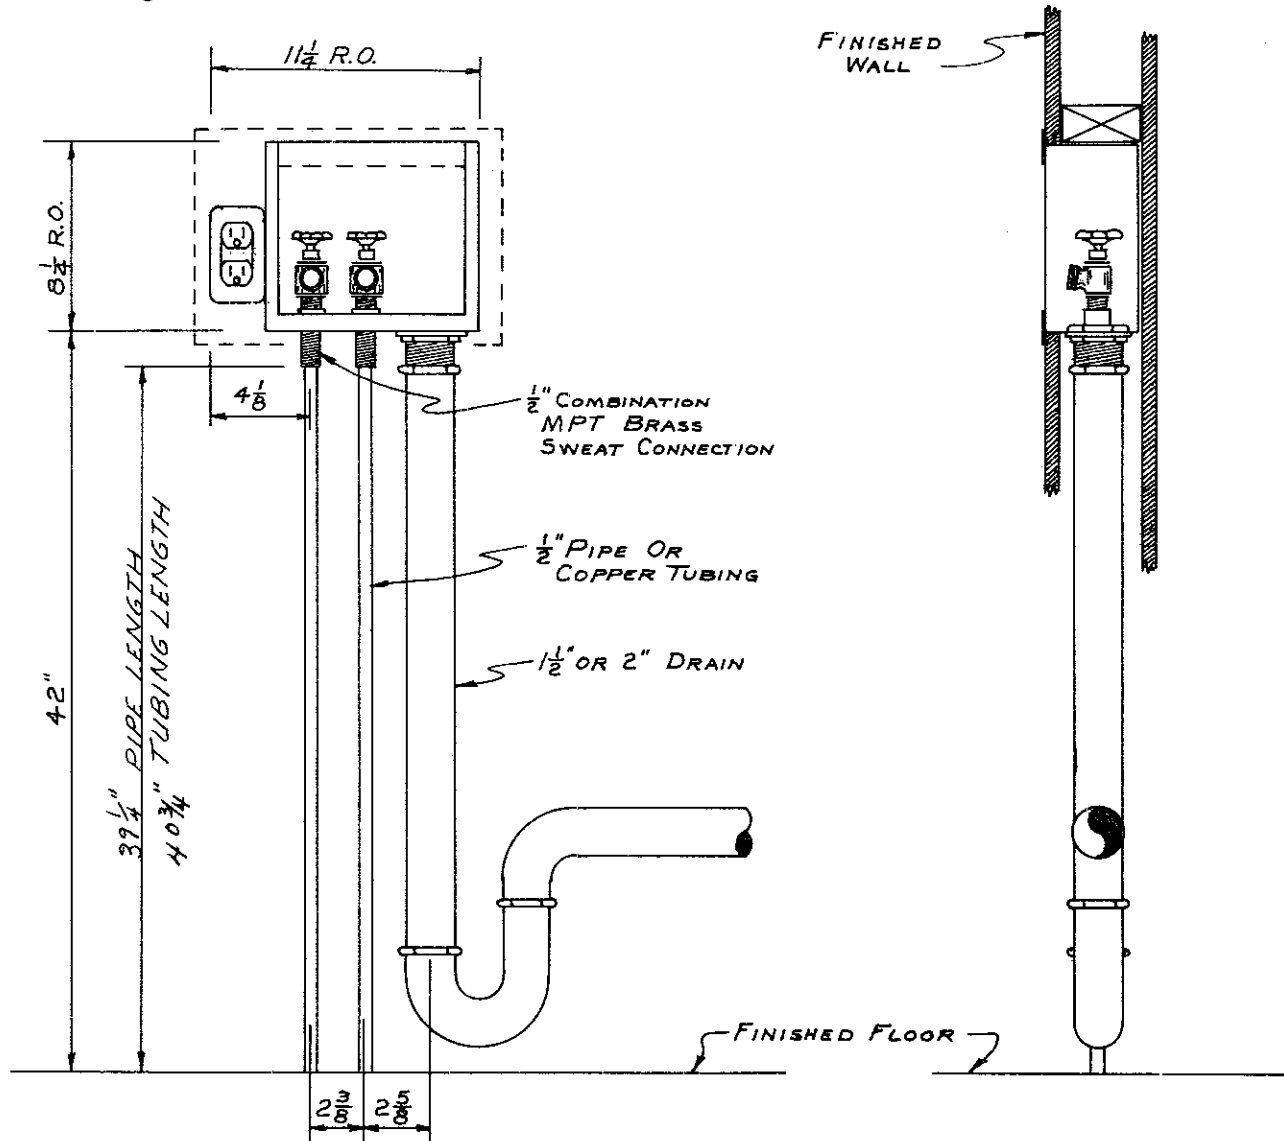

## PLUMBING ROUGHING-IN MEASUREMENTS FOR SPACE SAVER WASHING MACHINE SUPPLY AND DRAIN MODEL FBE 150 & FBE 200

### INSTALLATION INSTRUCTIONS

1. Remove front plate from fixture.
2. Fasten fixture to stud or header with screws in holes provided.
3. Install half inch male end of connectors through half inch holes in bottom of fixture and secure with rubber washers—crow foot and half inch lock nuts.
4. Install half inch male faucets in female end of connector inside of fixture using pipe joint compound
5. For copper installation sweat copper tube to bottom of connector
6. For galvanized pipe installation use half inch coupling or unions.
7. To connect drain line use flanged locknut with rubber washer with slip nut installed inside fixture
8. Drill weep hole in slip nut so any water spills in box will run into drain
9. After wall is finished, replace front plate with screws provided with fixture.