


Guy Gray Manufacturing Co., Inc.

Blandville Road P. O. Box 2287 Paducah, Ky. 42001 Phone (502) 554-4423

For Top Supply Models Set
Tubing 50 $\frac{1}{4}$ " Above Finished Floor

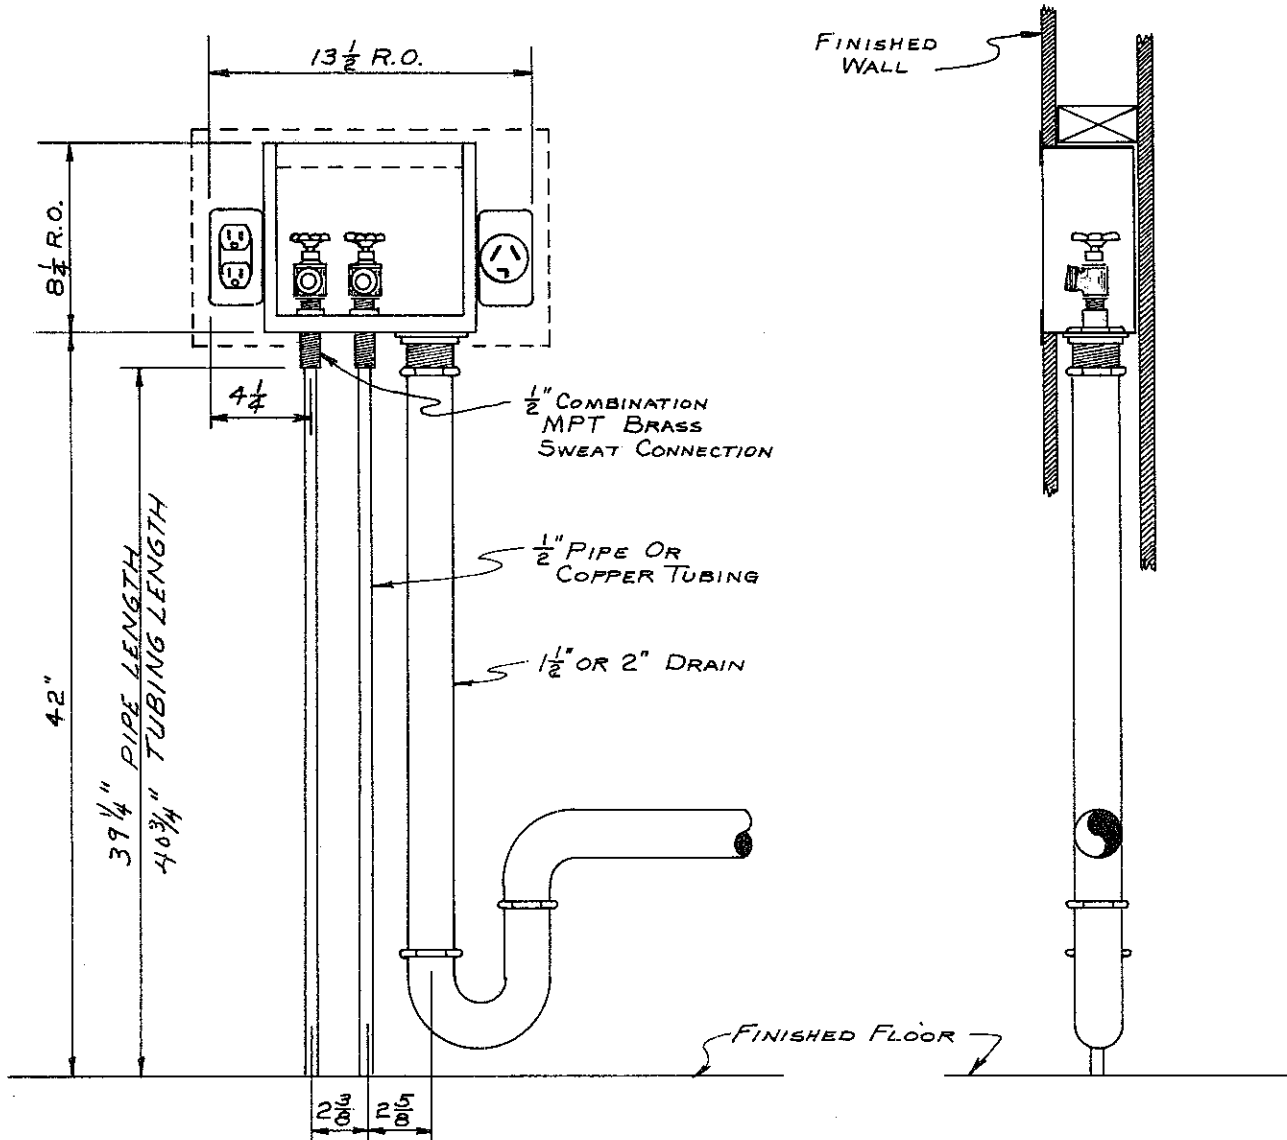

PLUMBING ROUGHING-IN MEASUREMENTS FOR SPACE SAVER WASHING MACHINE SUPPLY AND DRAIN MODEL FBED 150 & FBED 200

INSTALLATION INSTRUCTIONS

- 1 Remove front plate from fixture.
- 2 Fasten fixture to stud or header with screws in holes provided.
- 3 Install half inch male end of connectors through half inch holes in bottom of fixture and secure with rubber washers—crow foot and half inch lock nuts.
- 4 Install half inch male faucets in female end of connector inside of fixture using pipe joint compound.
- 5 For copper installation sweat copper tube to bottom of connector.
- 6 For galvanized pipe installation use half inch coupling or unions.
- 7 To connect drain line use flanged locknut with rubber washer with slip nut installed inside fixture
- 8 Drill weep hole in slip nut so any water spills in box will run into drain
- 9 After wall is finished, replace front plate with screws provided with fixture.