
Guy Gray Manufacturing Co., Inc.

Blandville Road P. O. Box 2287 Paducah, KY 42002-2287 Phone (502) 554-4423

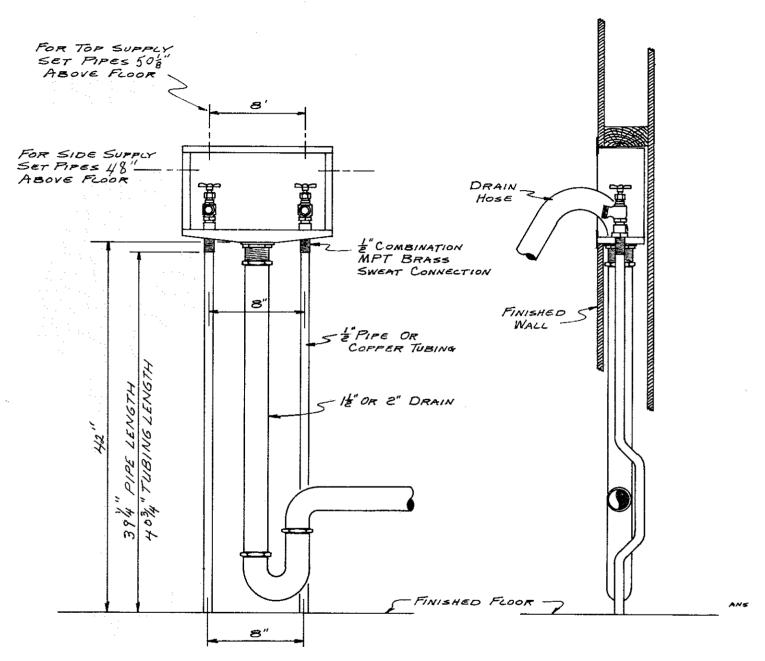

PLUMBING ROUGHING-IN MEASUREMENTS FOR SPACE SAVER
WASHING MACHINE SUPPLY AND DRAIN-MODEL T-150 & T200

INSTALLATION INSTRUCTIONS

- 1. Remove front plate from fixture.
- 2. Fasten fixture to stud or header with screws in holes provided
- 3 Install half inch male end of connectors through half inch holes in top of fixture and secure with rubber washers—crow foot and half inch lock nuts
- 4. Install half inch male faucets in female end of connector inside of fixture using pipe joint compound
- 5 For copper installation sweat copper tube to bottom of connector.
- For galvanized pipe installation use half inch coupling or unions.
- 7 To connect drain line use flanged locknut with rubber washer with slip nut installed inside fixture
- 8. Drill weep hole in slip nut so any water spills in box will run into drain.
- 9. After wall is finished, replace front plate with screws provided with fixture.